


2009-18 RAM

TRIM TO FIT - SHORT BED INSTRUCTION

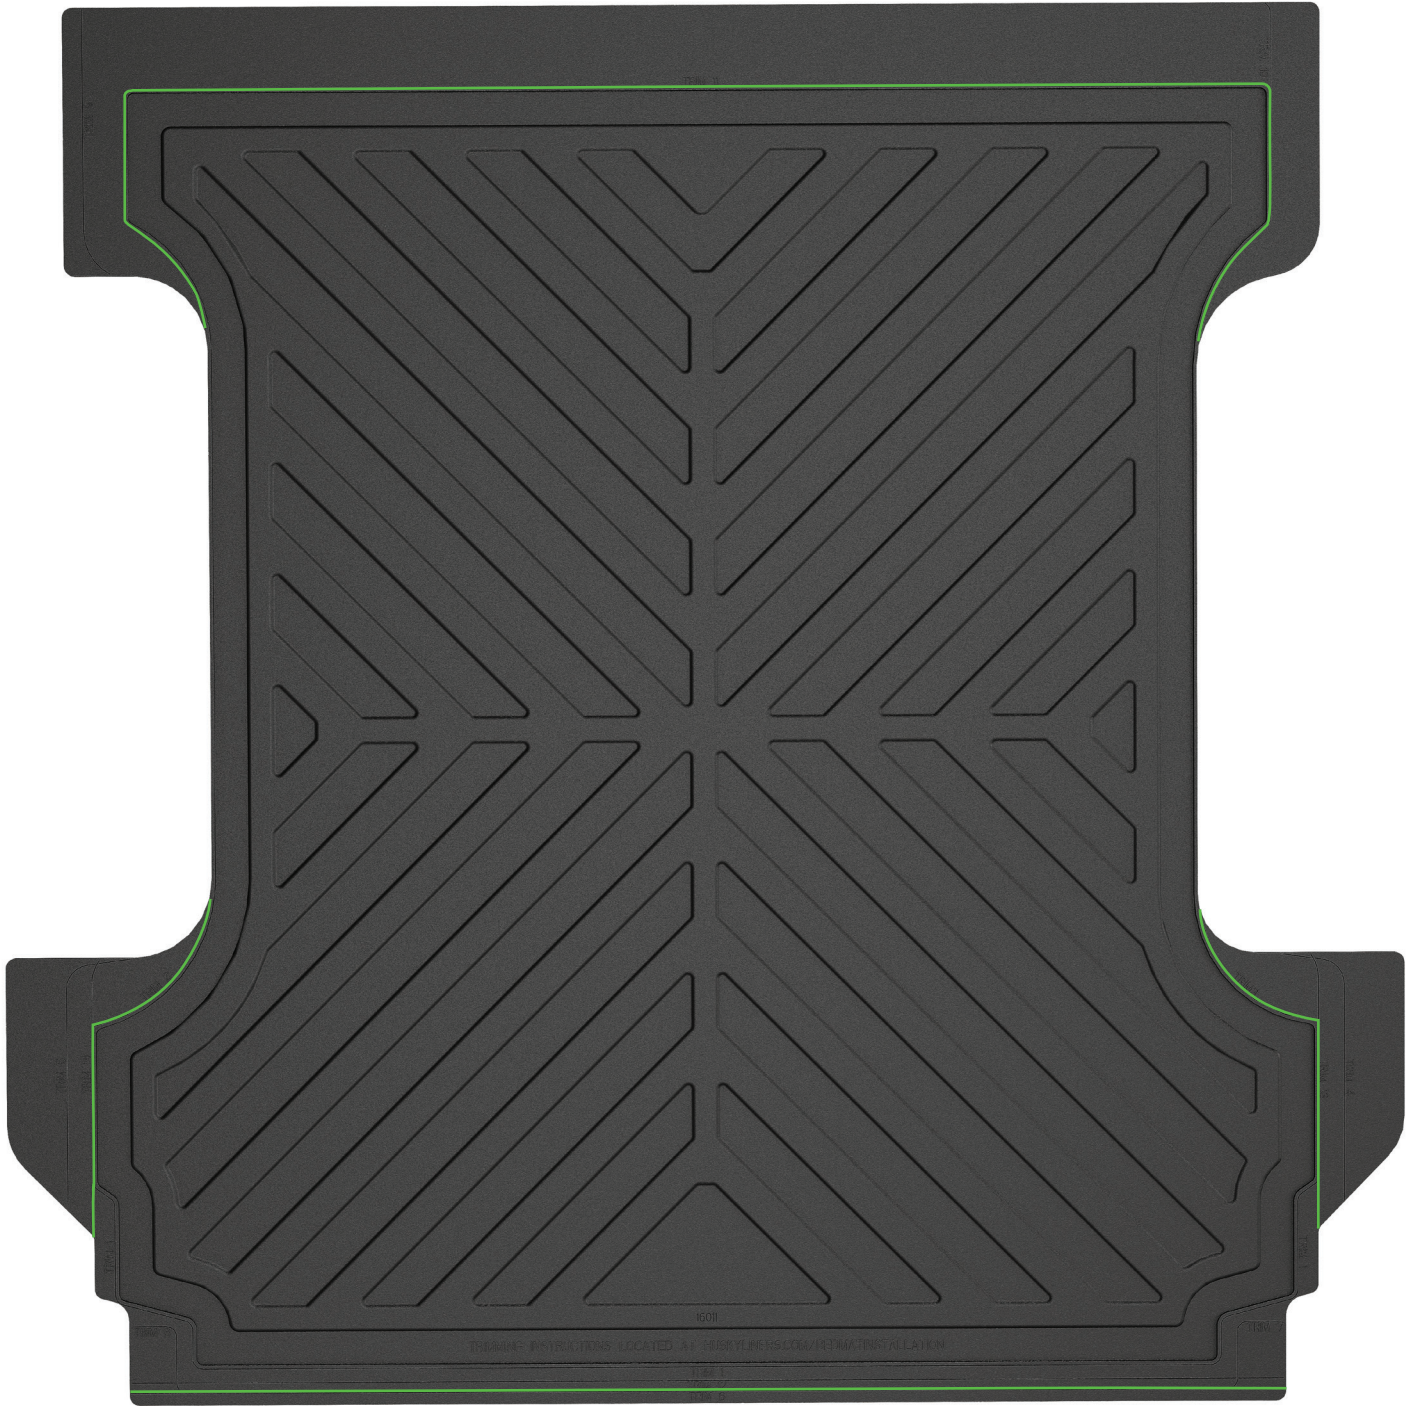

USE TRIM LINES 2, 3, 6, 10, 11, 13 AND 14

Part# 16011

